



# COFFEE CLEAN

## DETERGENT AND DESCALER FOR COFFEE MACHINE FILTERS

PRODUCT FOR  
PROFESSIONAL USE ONLY

Detergent powder with descaling action designed to remove organic and limestone residuals from coffee machine filters.

### INSTRUCTIONS FOR USE

Add 1 to 2 tablespoons of the product in the filter holder of the coffee machine by inserting blind filters. Start cleaning cycles in closed circuit with the cleaning solution for at least 10 times, each time by disposing residual dirt. At the end of the cleaning cycle, apply abundant rinsing in the open circuit.

### STORAGE

Keep container tightly closed.  
Store between 0 and 40° C.

### SHELF LIFE AND PACKAGING

24 months , 1 kg/can

### PRECAUTIONS

Please refer to the Material Safety Data Sheet.